



SINGULAIR GREEN® BIO-KINETIC® WASTEWATER TREATMENT SYSTEM

TANK DELIVERY AND SETTING

To insure that all work proceeds safely and efficiently, check these items prior to delivery of the Singulair Green tank.

Does the driver have complete and accurate directions to the installation?

Does the driver have the Singulair installer's tool kit?

Are the appropriate aerator mounting riser, vented access cover, Bio-Kinetic system mounting riser, pretreatment riser, sealed access covers and extension risers included?

Are additional anti-flotation measures required for this installation?

Is a sufficient amount of water and gravel available for the installation?

Is an adequate supply of sealing material available for all plumbing connections?

Does the delivery vehicle have the proper pick-up bar, cable, straps and/or chain?

Is the proper Service Pro control center available for delivery with the tank?

Is there sufficient underground electrical cable to reach from the control center to the tank?

PLEASE NOTE: The Singulair Green tank is constructed of high density polyethylene. All joints have been factory sealed for your convenience. This will minimize tank loading, unloading and setting time at the site. The Singulair Green tank has been designed for underground use only. Do not install the tank in a location that is subject to vehicular traffic.

CHECKING THE EXCAVATION

Before tank setting begins, verify that the excavation is level and free of sharp stones and construction debris. Clear out any objects that could come in contact with the tank.

The length, width and depth of the excavation should be checked. The excavation should have sufficient overdig to allow between 18" to 24" of clearance around the entire perimeter of the Singulair Green system. In addition, the excavation should allow for a minimum of 6" and a maximum of 16½" of cover over the top of the tank. For deeper installations, consult the Deeper Burial Requirements section of this guide. Failure to follow the excavation and backfilling guidelines may result in tank damage and will void the system warranty.

Check the influent and effluent sewer line trenches. The trench depth should correspond with the Singulair Green system inlet and outlet connections and the trenches should be smooth to prevent damage to the sewer lines.

A tank leveling pad should be installed in the bottom of the excavation. The leveling pad should be a minimum of 4" thick and leveled to within ¼" from side to side and end to end. The elevation of the top of the leveling pad should correspond to the outside bottom of the Singulair Green tank when installed. In areas with unstable soil conditions, a reinforced concrete pad may be required under the Singulair Green tank.

Safe working conditions must be established and maintained during the entire installation procedure. Unstable soil conditions require constant monitoring of the site to insure safety. Installation procedures, equipment and personnel should always comply with applicable safety regulations as well as all federal, state and local codes.



TANK WITH DELIVERY TRAILER

Do not install the Singulair Green tank in saturated clay, areas with a high water table, bogs, swampy areas, landfills where the soil is soft or wet, areas containing expansive soils or soils with an ultimate bearing capacity of less than 1,500 psf. Failure to follow these directions may result in damage to the tank and will void the system warranty.

TEMPORARY UNIT STORAGE

If a Singulair Green tank is delivered before installation can occur, store the tank on smooth ground with no rocks or sharp objects against the tank. Chock the tank with sandbags to prevent tank movement. If high winds are anticipated, tie the tank down to prevent any damage.


PREPARING THE SINGULAIR GREEN® TANK

Before installing the Singulair Green tank, inspect for signs of damage that may have occurred during transportation or handling. Damaged tanks could leak and should not be installed. Check the inlet and outlet couplings for any signs of damage that would prevent solvent welding to the plumbing. Inspect all risers and access covers to insure no damage has occurred. Verify that all riser and access cover fasteners are securely attached.

CAUTION: Extreme care should be used in the vicinity of any excavation. A delivery vehicle can place excessive loading on excavation sidewalls and care must be taken in its positioning. Once installed, no vehicle should operate over the tank or any other part of the treatment system.


TANK SETTING AND SAFETY

Make sure the delivery vehicle outriggers are firmly placed on stable soil at the excavation site. All personnel must be out of the excavation area and at a safe distance from the tank. Before lifting the tank, check all lifting chains, straps or cables to be sure they are properly secured. Lift the tank using at least four of the molded lifting lugs located on the Singulair Green tank. Carefully lower the tank into the excavation. Stop the tank several inches above the excavation floor and position it in the desired location. Lower the tank carefully until all tension is off the lifting device. Do not remove the lifting chains, straps or cables until tank leveling has been completed.

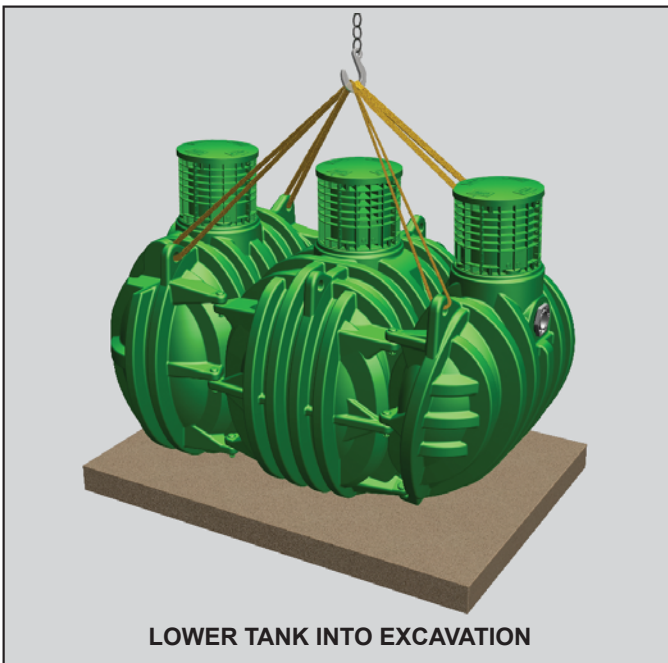

LEVELING THE TANK

Remove the access covers and place a level on the risers to verify that the tank is level within $\frac{1}{4}$ " from side to side and end to end. If the tank needs to be raised more than 6" to apply leveling material, all personnel should move to a safe location so the tank can be fully removed from the excavation. Fall through the system from inlet invert to outlet invert is 4". Therefore, the outlet invert of the system must be installed 4" lower than the inlet invert.

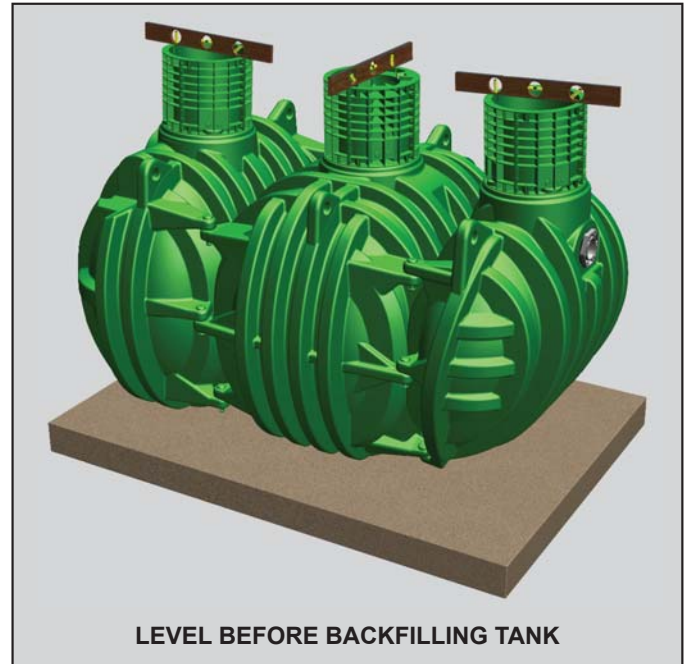

MOUNTING RISER AND OPTIONAL EXTENSION RISER INSTALLATION

If extension risers are required, install them as needed above each mounting riser. To insure a watertight seal, install an o-ring gasket in all joints between the risers.

Access to the pretreatment chamber can be developed to grade or below grade as required by local regulation or owner preference. The access cover on the pretreatment chamber must be developed to within 12" of finished grade. Place a sealed access cover on the pretreatment chamber access opening. Place a vented access cover on the aerator mounting riser and a sealed access cover on the Bio-Kinetic system mounting riser before backfilling.

SEWER LINE INSTALLATION

Sewer lines may be installed as soon as the Singulair Green tank has been leveled. Sewer line trenches must be smoothly excavated and free of debris or sharp objects. The trenches must allow sewer lines to be laid with $\frac{1}{8}$ " of fall per lineal foot. Influent and effluent sewer lines must be at least 4" in diameter. The influent and effluent lines should be PVC pipe and solvent welded into the Singulair Green tank inlet and outlet couplings. Influent and effluent lines must be laid continuously and unspliced from the tank to the undisturbed earth beyond the tank excavation site.

Underground electrical cable for electrical service to the Singulair aerator should be installed in the influent sewer line trench before backfilling the Singulair Green tank. Refer to the "ELECTRICAL WIRING AND CONTROL CENTER INSTALLATION" instructions for complete details.

CAUTION: Do not attempt to adjust the position of the tank or sewer lines with the backhoe bucket. Excessive force may damage the inlet and/or outlet couplings.

GROUND WATER RELIEF POINT

The effluent sewer line should be installed with a ground water relief point to prevent back-up into the system if the effluent discharge point is blocked or flooded. This device can be constructed by installing a pipe tee in the effluent sewer line and extending it to grade. The relief point must be at a lower elevation than the outlet invert of the Singulair Green tank. The extension to grade should be installed with a suitable screen to prevent access to the sewer line.

BACKFILLING THE GREEN SYSTEM

Prior to backfilling, add a minimum of 12" (250 gallons) of ballast water to the Singulair Green tank to prevent shifting in the excavation. Fill each chamber to an equal level. Do not add water through the clarifier access opening. The clarification chamber will be filled through the transfer opening between the aeration and clarification chambers as the aeration chamber is filled. The Singulair Green tank must be backfilled immediately after the sewer lines, underground electrical cable and ballast water are in place.




Cover all openings, then begin backfilling with gravel under and around the sloped clarifier. Continue to add gravel until the discharge line from the Singulair Green tank is covered. Proceed to the inlet end of the pretreatment chamber and add gravel until the inlet line is covered. Fine, loose earth may be used to backfill the remainder of the excavation.

Be sure that the backfill is free of rocks, sharp objects, large clumps of earth and construction debris. Never use clay for backfill material. The backfill must flow freely and care should be taken to insure that all recesses formed between the ribs and beneath the area between the pretreatment and aeration chambers are completely filled. Add backfill evenly around the entire perimeter of the Singulair Green tank in 12" increments. Hand tamp each layer of fill to compact soil. When backfilling over the tank, add fill to the area between the risers first. Final grading should be 3" to 6" below the top of each access cover and should slope away from the tank so surface runoff will drain away from the Singulair Green system. Use extreme care when backfilling the excavation. Do not allow dirt or mud to enter any part of the Singulair Green system or sewer lines.

TANK HOLD DOWN WATER

The Singulair Green tank must be filled with clean water to the outlet invert immediately following backfilling. The water must be free of leaves, mud, grit or other materials that might interfere with system operation.

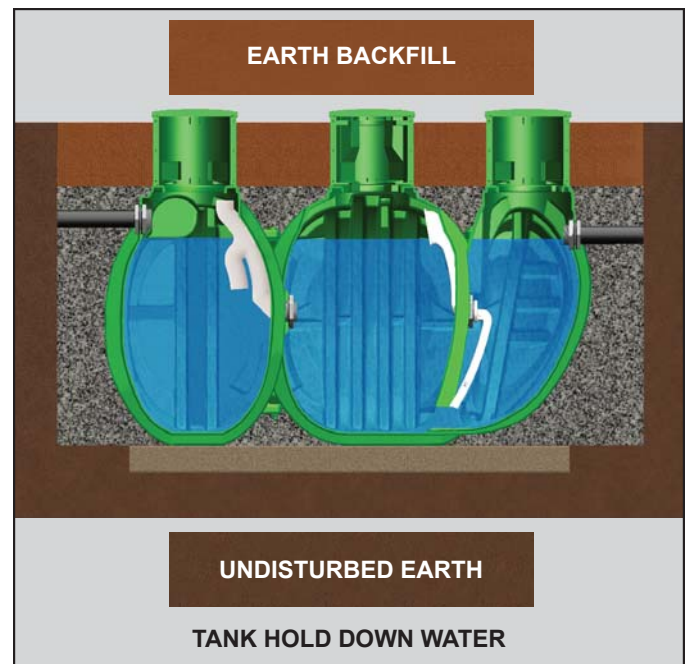

When pumping or dewatering the Singulair Green tank, only pump the pretreatment chamber. Then, promptly refill the tank to capacity with clean water. Dewatering and leaving the Singulair Green tank empty will effect tank integrity and void the Singulair Green warranty.

DEEPER BURIAL REQUIREMENTS


Special consideration should be taken if the Singulair Green tank is buried deeper than 16 1/2" below grade. However, the tank should never be buried deeper than 34 1/2" below grade. If deep burial is required, first fill the tank with 12" of clean ballast water. Next, backfill around the entire tank with gravel up to the base of the risers. Once gravel is in place, fill the tank with clean water to the design flow line. Finally, backfill to grade with native soil.

SPECIAL ANTI-FLOTATION SYSTEM

In areas where high water is a concern, it may be necessary to provide additional anti-flotation measures to secure the Singulair Green tank. Anti-flotation is not required when the tank is installed with at least 16" of fill over the tank and the soil density of the backfill is at least 100 pounds per cubic foot. Failure to follow the anti-flotation recommendations provided in this document may result in damage to the Singulair Green tank or shifting in the excavation and may void all or part of the limited warranty.

If anti-flotation is required, consult a soil scientist to measure soil density. Once soil density is defined, refer to the SHALLOW BURIAL AND REDUCED SOIL DENSITY HOLD DOWN REQUIREMENTS chart below. After the amount of additional hold down weight is determined, it is recommended that a pair of concrete beams of appropriate size be placed at the base of the excavation. Alternately, 0.60 CCA treated lumber anti-flotation beams may be used. Treated lumber anti-flotation beams and anti-flotation strap assemblies are available from Norweco. Beams must not be placed directly under the perimeter of the Singulair Green tank. The weight of the soil over the beams significantly contributes to the tank hold down forces. Placing beams under the tank will limit the amount of soil anchoring the beams into the excavation and should never be done.

Secure the anti-flotation beams to the Singulair Green tank with properly rated hold down straps that attach to the lifting lugs located at the top of each of the three chambers. The weight of the beams plus the weight of the soil over the beams must be greater than the required hold down weight shown in the table below.

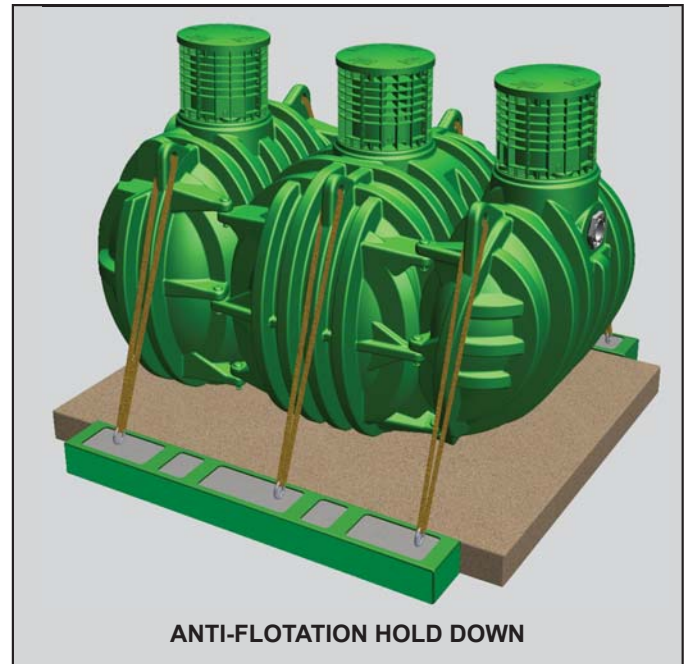

COMPLETING THE INSTALLATION

Once backfilling has been completed and the tank has been filled with clean water, the access openings must be secured. Install a sealed access cover on the pretreatment and clarification chamber risers. Install a vented cover on the aeration chamber riser. Secure all access risers with the fasteners that have been provided. Installation of the control center and underground electrical cable are normally completed before leaving the site. Refer to "ELECTRICAL WIRING AND CONTROL CENTER INSTALLATION" instructions for details.

SHALLOW BURIAL AND REDUCED SOIL DENSITY HOLD DOWN REQUIREMENTS						
Soil Density (lbs. per cu.ft.)	80	90	100	110	120	130
Fill Over Tank (inches)	Additional Weight Required (lbs.)	Additional Weight Required (lbs.)	Additional Weight Required (lbs.)	Additional Weight Required (lbs.)	Additional Weight Required (lbs.)	Additional Weight Required (lbs.)
6	6,915	5,935	4,956	3,976	2,996	2,017
8	6,091	5,008	3,926	2,843	1,761	678
10	5,267	4,081	2,896	1,710	525	
12	4,443	3,155	1,866	578		
14	3,619	2,228	836			
16	2,796	1,301	STANDARD INSTALLATION			
18	1,972	374				
20	1,148					
22	324					
24						
HOLD DOWN WEIGHT NOT REQUIRED						

norweco[®]

Engineering the future of water and wastewater treatment

220 REPUBLIC STREET
 NORWALK, OHIO, USA 44857-1156
 TELEPHONE (419) 668-4471
 FAX (419) 663-5440
 www.norweco.com

DISTRIBUTED LOCALLY BY:

Norweco[®], Norweco.com[®], Singulair[®], Modulair[®], Travalair[®], Singulair Green[®], Ribbit Rivet[®], Hydro-Kinetic[®], Lift-Rail[®], Microsonic[®], Bio-Dynamic[®], Bio-Sanitizer[®], Bio-Neutralizer[®], Bio-Kinetic[®], Bio-Static[®], Bio-Gem[®], Bio-Max[®], Bio-Regeneration[®], Bio-Perc[®], Blue Crystal[®], ClearCheck[®], ChemCheck[®], Tri-Max[®], Hydra-Max[®], Service Pro[®], MCD[®], TNT[®], Grease Buster[®] and "BUSTER" logo[®] are registered trademarks of Norwalk Wastewater Equipment Company, Inc.